


USER'S GUIDE


•	HP3cc:	7023590
•	HP5cc:	7015289
•	HP10cc:	7012598



Setup and Operation

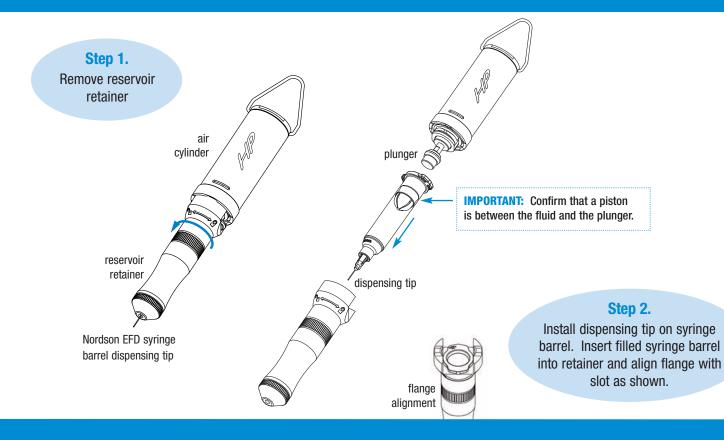

Setup and Operation

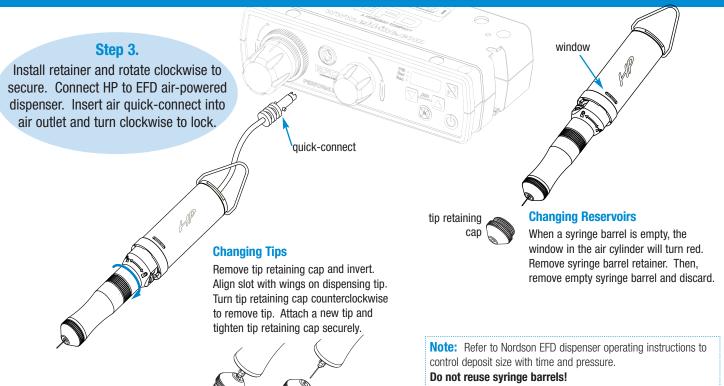

Wipe plunger clean (if necessary) before installing a new reservoir.

Troubleshooting & Parts List



If the HP should cease to operate, service of the piston U-cup and shaft bushing may be required. Please follow procedure below:

- 1. Remove air cylinder cap.
- 2. Remove drive plunger.
- **3.** Remove piston and shaft assembly. Replace piston U-cup and lubricate lightly with O-ring grease.
- Press shaft bushing out from bottom of cylinder toward piston chamber. Replace with new bushing.
- 5. Install piston assembly and reinstall the air cylinder cap and drive plunger.

	Drive Plungers	Piston & Shift	Piston Seal
HP3cc	7015986	7018915	7015985
HP5cc	7015987	7015984	7015985
HP10cc	7015988	7018932	7018937

For Nordson EFD sales and service in over 30 countries, contact Nordson EFD or go to www.nordsonefd.com

East Providence, RI USA USA & Canada: 800.556.3484; +1.401.431.7000 info@nordsonefd.com

Dunstable, Bedfordshire, UK 0800 585733; +44 (0) 1582 666334 Ireland 00800 8272 9444 europe@nordsonefd.com

China: +86 (21) 3866 9006 china@nordsonefd.com

Singapore: +65 6796 9522 sin-mal@nordsonefd.com

The Wave Design is a trademark of Nordson Corporation. ©2010 Nordson Corporation HP-MAN-01 7026512 (MMR # 5335) v042210

