


UHMW polyethylene

752V-HL

Get millions of operations without sticking or repairs. The flexible diaphragm ensures trouble-free, precise operation. Use for cyanoacrylate deposits or for any low viscosity fluid.

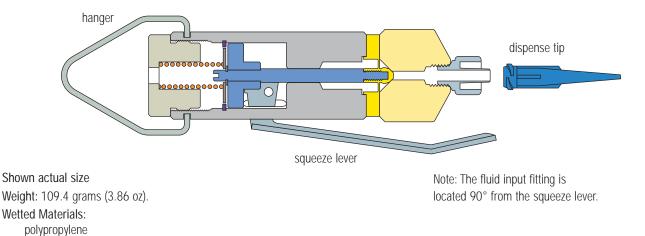

Operation

Squeezing the lever causes the diaphragm to open 6 mm (0.024") allowing pressurized fluid to flow out the dispense needle. Releasing the lever provides instant, drip-free cutoff of liquid flow.

Applications

The 752V-HL is the best choice to apply beads of cyanoacrylate for gasket and grommet bonding. Also use for MEK bonding of plastic items and applying anaerobic to various automotive parts.

Recommendations

For cyanoacrylates, use the #2000756 filter regulator which incorporates a coalescing filter to trap any airborne moisture.

Order tanks and dispense tips separately. See pages 6-7. For fluid compatibility, see page 2.